

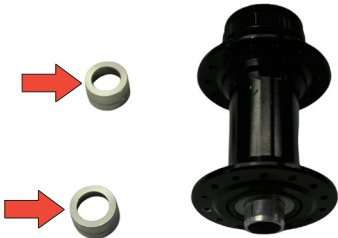
FULCRUM®

**MAINTENANCE CARD
WHEELS – ROAD / GRAVEL DB**

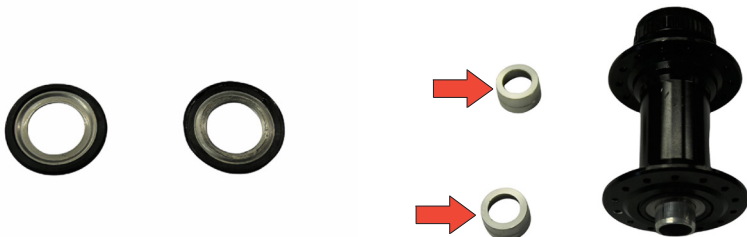
**FRONT AND REAR HUB
ASSEMBLY / DISASSEMBLY**

MAINTENANCE CARD

GROUPSET		TYPE			REVISION		DESCRIPTION		
ROAD WHEEL DISC BRAKE TUBELESS READY		INDUSTRIAL BEARING			00/ 2021		FRONT HUB DISASSEMBLY / ASSEMBLY		
PRODUCTS ON WHICH TO APPLY THE PROCEDURE									
RACING 800 DB	RACING 900 DB	RAPID RED 900	AIRBEAT 400 DB	AIRBEAT 550 DB	RACING 6 DB (MY 2022)	RACING 600 DB (MY 2022)			

					
1		2		3	
DISASSEMBLY Remove the two front adapters.		Remove the seals.		Push the axle to one side.	

		
4	5	
Remove the axle and the bearings.	ASSEMBLY Fit the axle and the bearings using a press and two adapters having the same internal and external diameters as the bearings.	

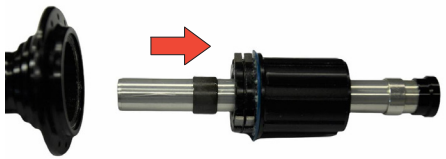
			
6			
Refit the two seals and the two adapters.			

MAINTENANCE CARD

GROUPSET	TYPE	REVISION	DESCRIPTION
ROAD WHEEL DISC BRAKE TUBELESS READY	INDUSTRIAL BEARING	00/ 2021	REAR HUB DISASSEMBLY / ASSEMBLY

PRODUCTS ON WHICH TO APPLY THE PROCEDURE

RACING 800 DB	RACING 900 DB	RAPID RED 900	AIRBEAT 400 DB	AIRBEAT 550 DB	RACING 6 DB (MY 2022)	RACING 600 DB (MY 2022)			

 1	 2	 3
DISASSEMBLY Remove the LH adapter and the gasket. If it is particularly difficult, use a pair of pliers as an aid.	Remove the axle and the FW body from the RH side of the hub.	Remove the spacer and the body from the axle. When refitting, remember to fit the spacer on the inner side of the FW body.

 4	 5	 6
ASSEMBLY Replace the bearings.	Fit the FW body on the axle.	Fit the spacer. Refit the subassembly on the hub.

 7	
Fit the seal and the LH adapter.	