### **TECHNICAL MANUAL 2013 - OFF-ROAD**

# MAINTENANCE

GROUP		ТҮРЕ			OPERATION		REVI	SION	DESCRIPTION			
MTB WHEELS		INDUSTRIAL BEARINGS MECHANISM			004		0/2011		SPOKE REPLACEMENT RED METAL 1XL / RED ZONE XLR FRONT AND REAR WHEEL			
PRODUCTS ON WHICH THE PROCEDURE IS APPLIED												
$\odot$	$\odot$											
Red Metal 1 XL™	Red Zone XLR	тм										







When round head spokes are being loosened, they tend to spin around. Use the special spoke retaining ring to hold the spoke still during the operation.





it from sliding out while being drawn inside the rim.







rim. Insert the new spoke inside the flange of the hub.

through the valve hole.

#### 10

Insert the nipple with the insert inside the rim through the valve hole. Using the special magnet, pull the nipple inside the rim up to the hole of the spoke to be replaced. Bring the nipple out from the hole of the rim. Loosen the magnet-attracting insert from the nipple. OFF-ROAD

## TECHNICAL MANUAL 2013 - OFF-ROAD

## MAINTENANCE





Fit the wrench on the nipple.





After tensioning, apply threadlocker between the nipple and the spoke. If the valve has been disassembled, re-assemble it. ► For valve assembly see OPERATION 003 (steps 19 to 21)